

Novo Cult

IRP00110

Istruzioni di montaggio ed uso
 Operation instructions
 Instructions de montage et usage
 Montage-und Bedienungsanleitung
 Instrucciones de montaje y uso
 instrucțiuni pentru montare și utilizare

IRSAP

creating your comfort

IRSAP SPA

45031 Arquà Polesine (RO) Italy
 Tel. +39 0425 466611 - Fax +39 0425 466662
 Website: <http://www.irsap.com>
 E-mail: info@irsap.it

IR GROUP SARL


19,Chemin de la Plaine 69390 Vourles (France)
 Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40
 Web: <http://www.irsap.com>;
 E-mail: irsaprhoss@irgroup.fr

IRSAP-RHOSS Clima Integral, S.L.




Oficina y Almacén: P.I.CAMI RAL
 Leonardo da Vinci,4 08850 Gavà (Barcelona)
 Tel. 93 633 47 00 - Fax 93 633 47 04
 E-mail: www.informacion@irsap.com
www.irsap.com

IRROM Industrie S.R.L.

Str. Principală I/A, Sat Fundătara, Iclod 407336,
 jud. Cluj, România
 Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404
 Web: www.irsap.ro

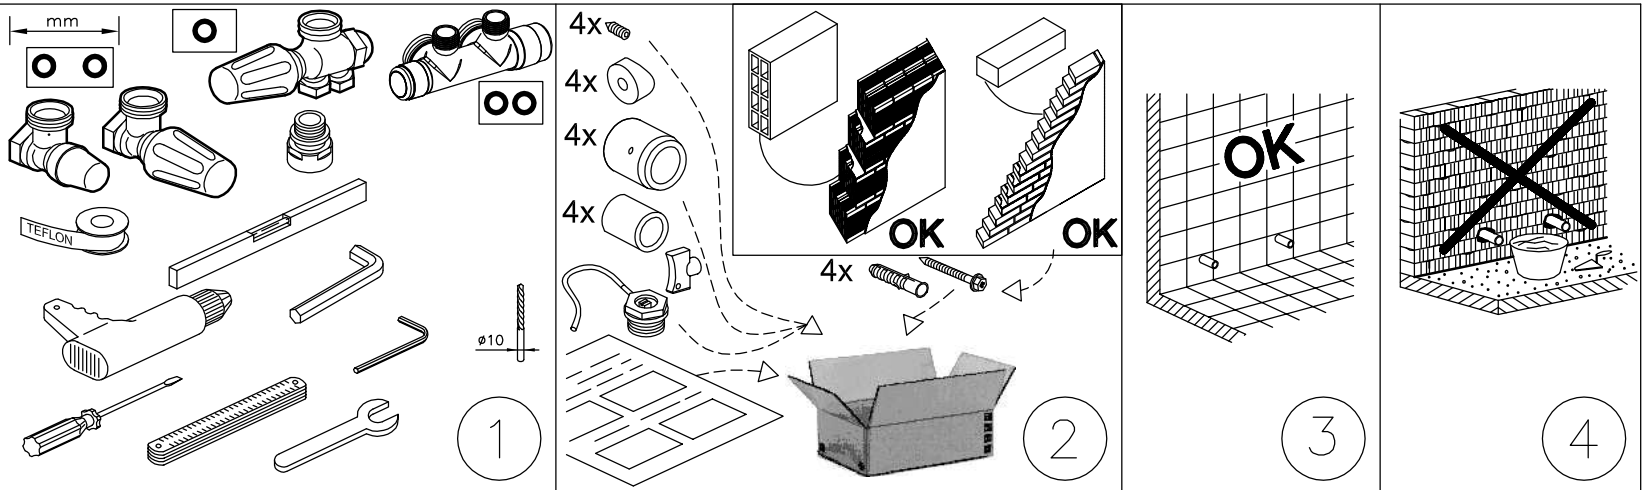

(*): ESEMPIO DI RADIATORE CON ALLACCIAMENTO STANDARD
 EXEMPLE DE RADIATEUR AVEC RACCORDEMENT
 EJEMPLO DE RADIADOR CON CONEXIÓN STANDARD
 EXAMPLE OF RADIATOR WITH STANDARD CONNECTIONS
 BEISPIEL EINES HEIZKÖRPERS MIT STANDARD-ANSCHLUSS
 EXEMPLU DE CALORIFERE CU CONEXIUNE STANDARD

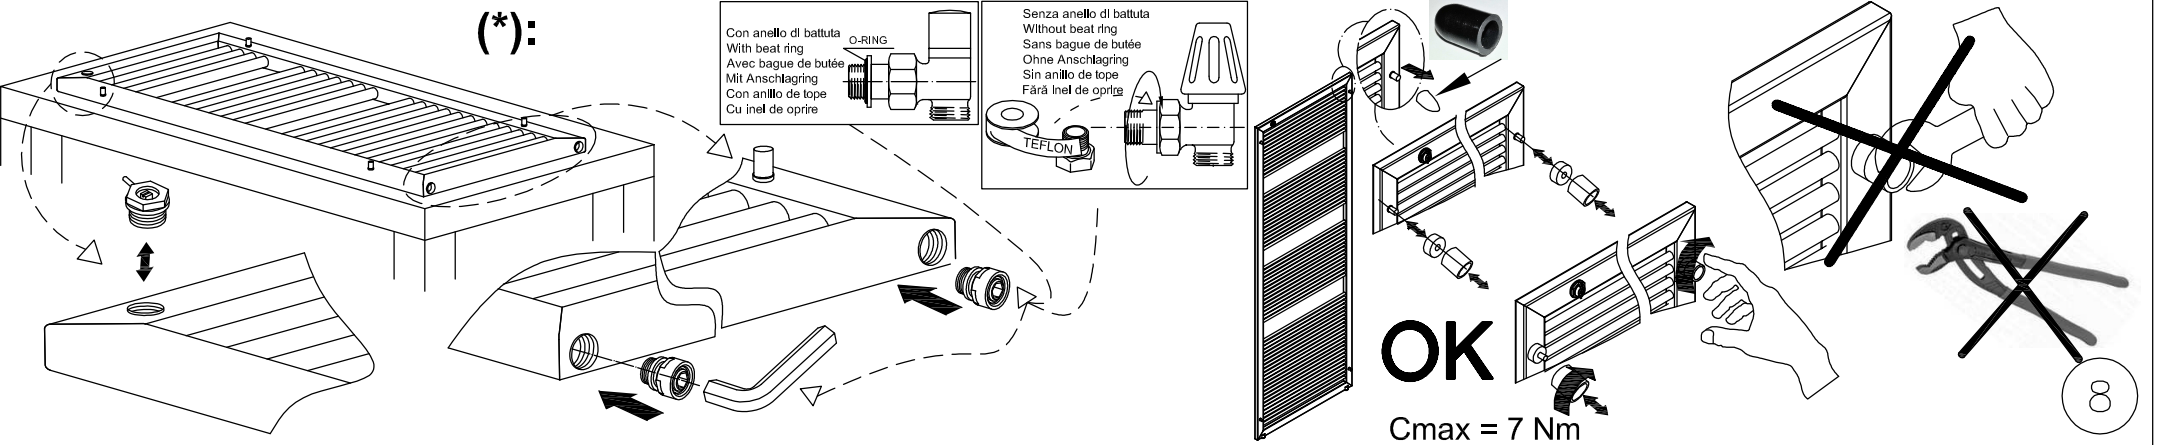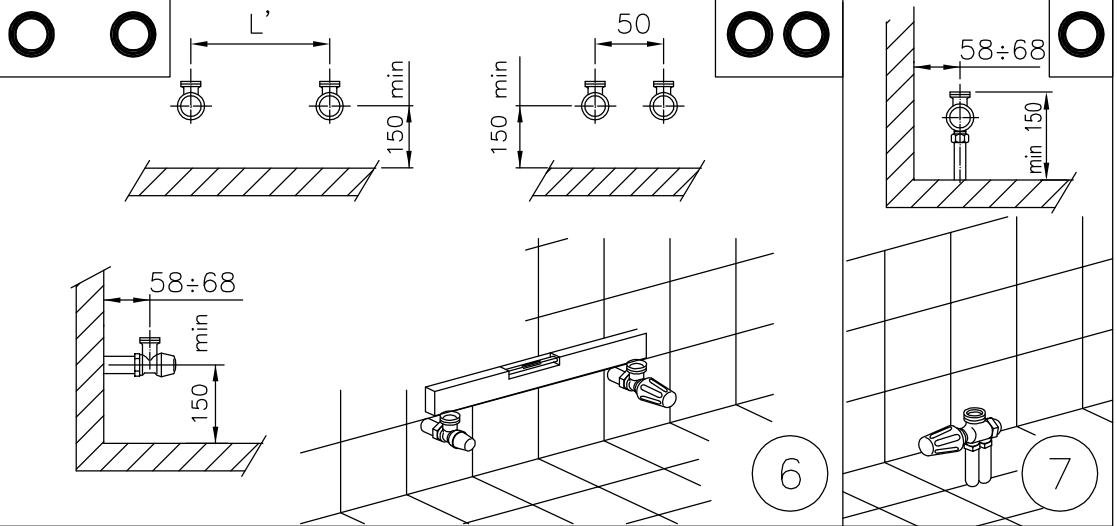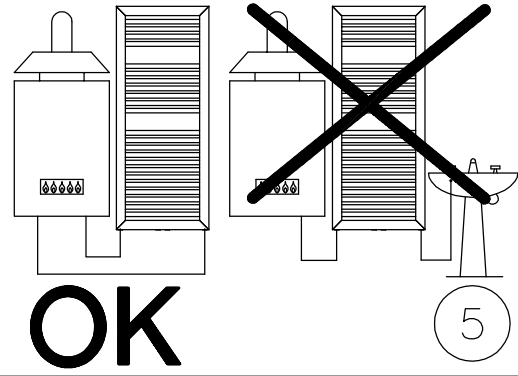

H	X	L	L'	Y
807	520	450	406	400
		500	456	450
		600	556	550
1207	920	450	406	400
		500	456	450
		600	556	550
1567	1280	500	456	450
		600	556	550
		450	406	400
1807	1520	500	456	450
		600	556	550
		450	406	400

