

# STEP B

IRP00212

Istruzioni di montaggio ed uso  
Operation instructions  
Instructions de montage et usage  
Montage- und Bedienungsanleitung  
Instrucciones de montaje y uso  
Instrucțiuni pentru montare și utilizare

# IRSAP

creating your comfort

IRSAP SPA 45031 Arquà Polesine (RO) Italy  
Tel. +39 0425 466611 ; Fax +39 0425 466662  
Website: <http://www.irsap.com>; E-mail: [info@irsap.it](mailto:info@irsap.it)

Numero Verde  
**800-252246**

IR GROUP SARL 19,Chemin de la Plaine  
69390 Vourles (France)





Tel. +33 04.28.00.01.67 ; Fax +33 04.72.31.86.40

Web: <http://www.irsap.com>; E-mail: [irsaphoss@irgroup.fr](mailto:irsaphoss@irgroup.fr)

IRSAP-RHOSS Clima Integral, S.L. Oficinas y Almacén:  
C./ Leonardo da Vinci, 4 Pol. Ind. Cami Ral  
08850 GAVA' (Barcelona)

Tel. +34 93 633 47 00 ; Fax +34 93 633 47 04

Web: <http://www.irsap.com>; E-mail: [info@irsap-rhoss.com](mailto:info@irsap-rhoss.com)

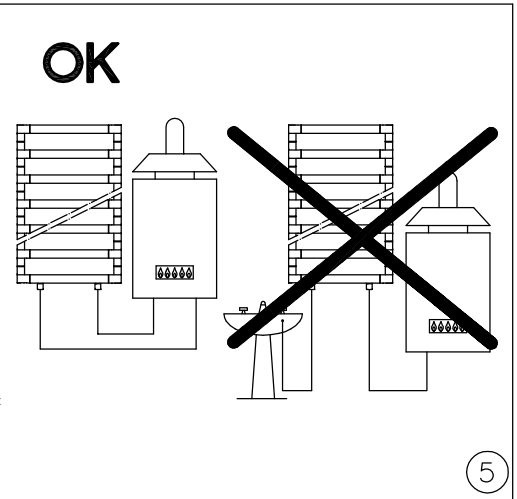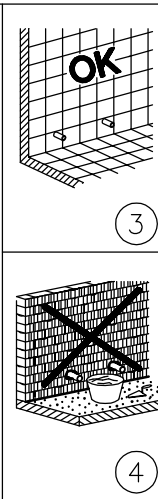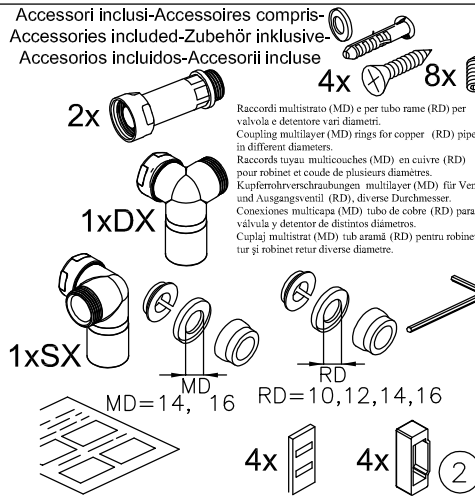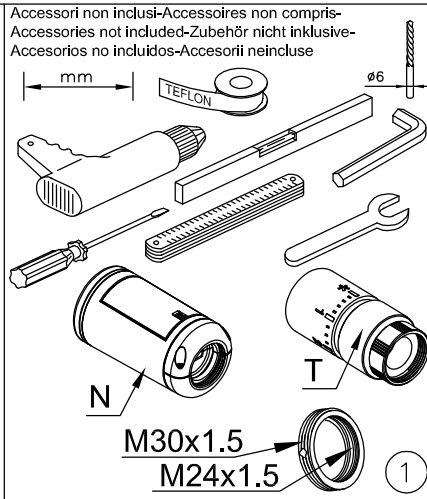

E	H	L	L'	X	Y	Z
	mm	mm	mm	mm	mm	mm
7	760	500	277	685	475	17.5±4
		600	377	685	575	
11	1240	500	277	1165	475	17.5±4
		600	377	1165	575	
15	1720	500	277	1645	475	17.5±4
		600	377	1645	575	

