

IRSAP

creating your comfort

Istruzioni di montaggio
Assembly Instructions
Instructions de montage
Montageanleitung
Instrucciones de montaje
Instrucțiuni pentru montare

IRSAP SPA

45031 Arquà Polesine (RO) Italy
Tel. +39 0425 466611 - Fax +39 0425 466662
Website: <http://www.irsap.com>
E-mail: info@irsap.it

IR GROUP S.A.R.L.

19,Chemin de la Plaine 69390 Vourles (France)
Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40
Web: <http://www.irsap.com>
E-mail: irsaphoss@irgroup.fr


IRSAP-RHOSS Clima Integral, S.L.

Oficina y Almacén: P.I.CAMI RAL
Leonardo da Vinci,4 08850 Gavà (Barcelona)
Tel. 93 633 47 00 - Fax 93 633 47 04
E-mail: www.informacion@irsap.com
www.irsap.com

IRROM Industrie S.R.L.

Str. Pricipală 1/A, Sat Fundătara, Iclod 407336,
jud. Cluj, România
Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404
Web: www.irsap.ro

O-RING 10x3.5	TUBO/PIPE 10
O-RING 12x2.5	TUBO/PIPE 12
O-RING 14x1.5	TUBO/PIPE 14
O-RING 15x1	TUBO/PIPE 15
O-RING 18x3	TUBO/PIPE 18
O-RING 20x2	TUBO/PIPE 20

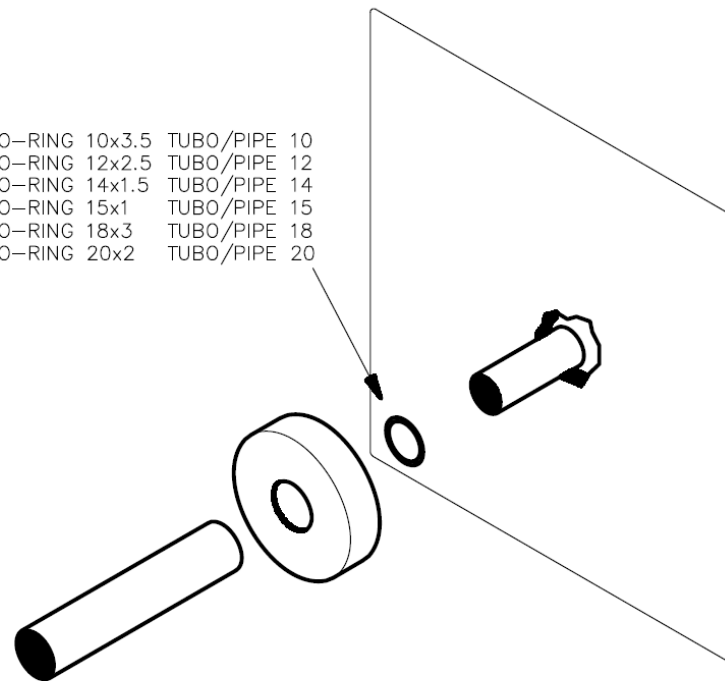

Z100080