

**IRSAP**  
creating your comfort

Istruzioni di montaggio  
Assembly instructions  
Instructions de montage  
Montageanleitung  
Instrucciones de montaje  
Instrucțiunile pentru montare

IRSAP SPA

45031 Arquà Polesine (RO) Italy  
Tel. +39 0425 466611 - Fax +39 0425 466662  
Website: <http://www.irsap.com>  
E-mail: [info@irsap.it](mailto:info@irsap.it)

IR GROUP SARL

19, Chemin de la Plaine 69390 Vourles (France)  
Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40  
Web: <http://www.irsap.com>  
E-mail: [irsaphross@irgroup.fr](mailto:irsaphross@irgroup.fr)

 
 
 
IRSAP-RHOSS Clima Integral, S.L.

Oficina y Almacén: P.L.CAMI RAL  
Leonardo da Vinci, 4 08850 Gavà (Barcelona)  
Tel. 93 633 47 00 - Fax 93 633 47 04  
E-mail: [www.informacion@irsap.com](mailto:www.informacion@irsap.com)  
[www.irsap.com](http://www.irsap.com)

IRROM Industrie S.R.L.




Str. Pricipală 1/A, Sat Fundătura, Iclod 407336,  
jud. Cluj, România  
Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404  
Web: [www.irsap.ro](http://www.irsap.ro)

cod.619M1116











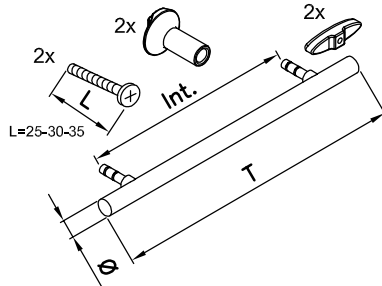
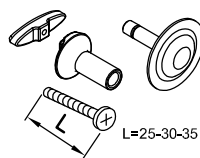
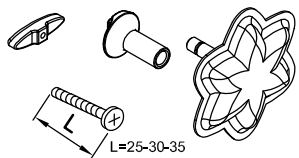


Ø	Int.	T
20	272	370
	340	480
25	270	370
	360	480

   
(\*):  
ESEMPIO CON Ø20  
EJEMPLO CON Ø20  
EXAMPLE WITH Ø20  
BEISPIEL MIT Ø20  
EXEMPLU CU Ø20

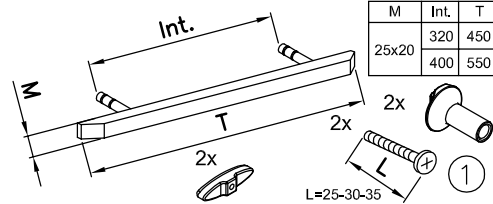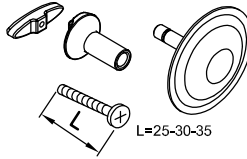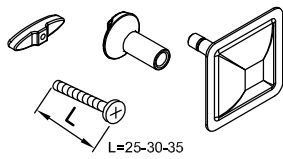

M	Int.	T
25x20	320	450
	400	550

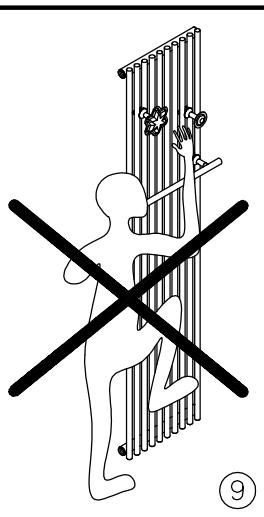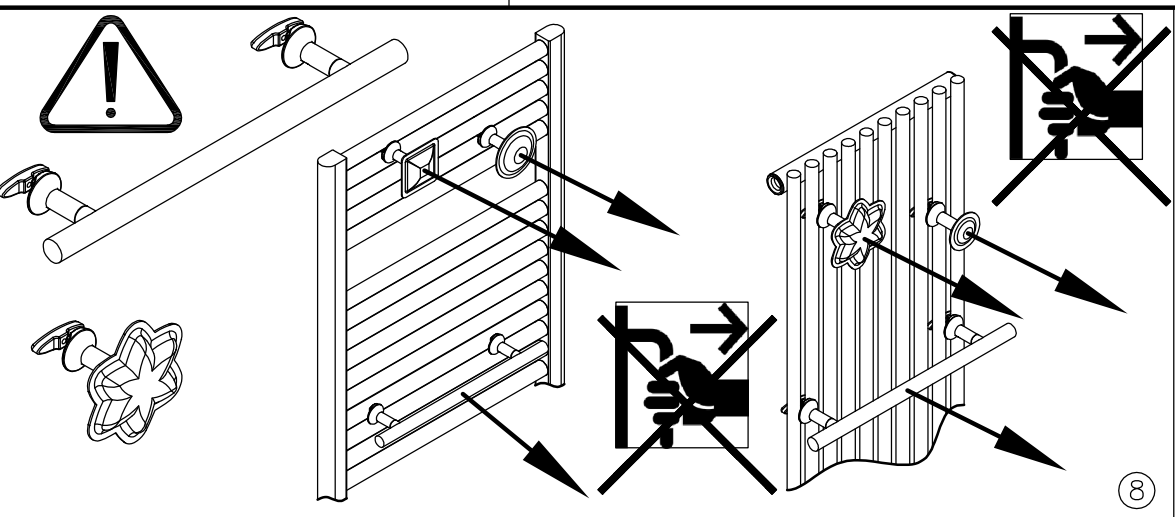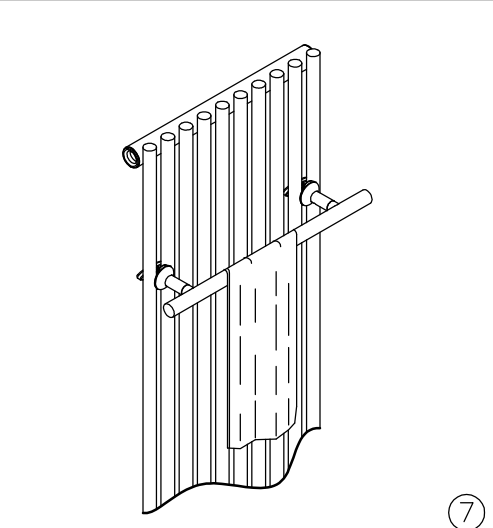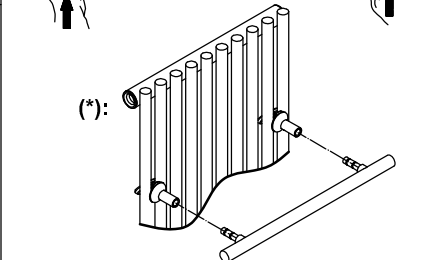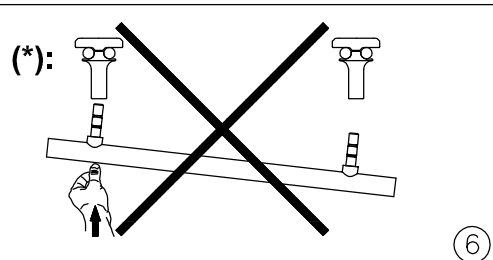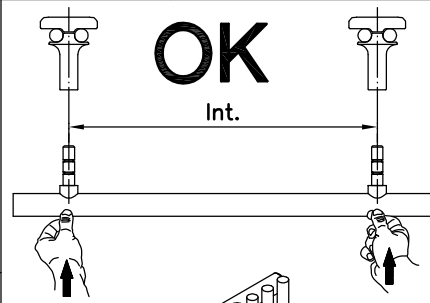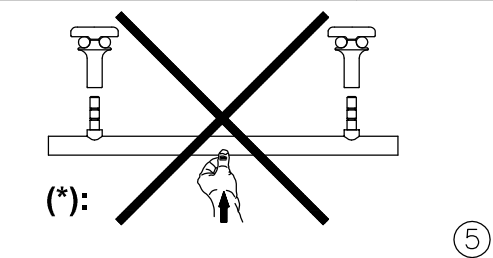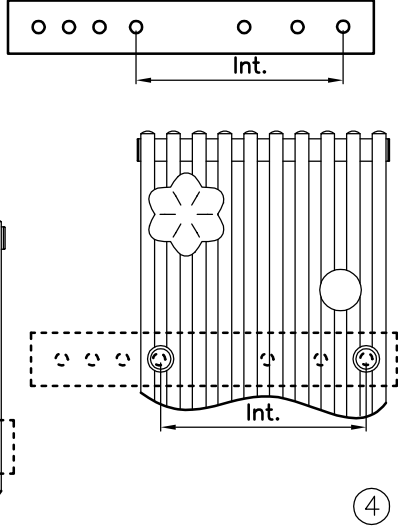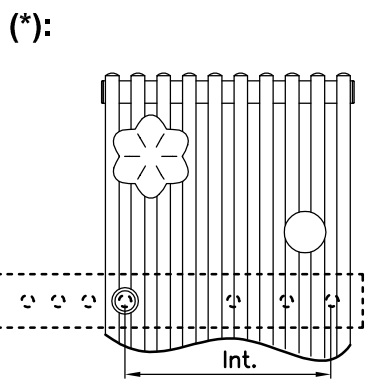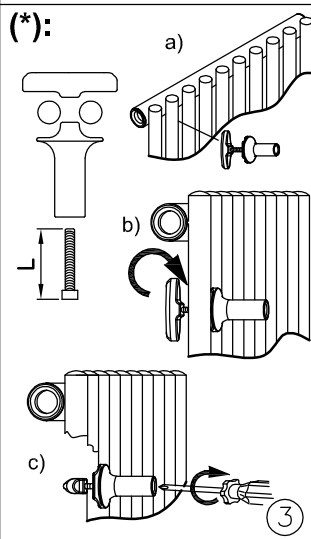          
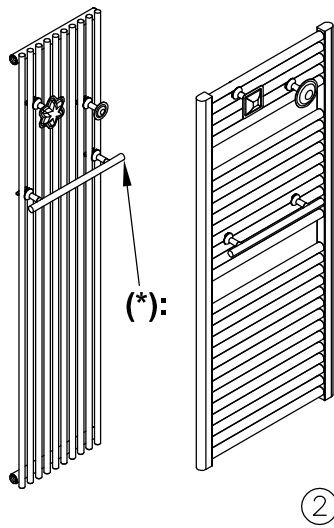 
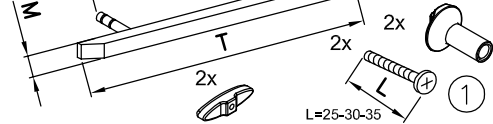 
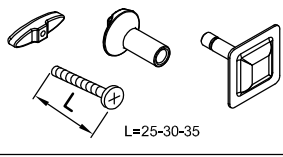 


Ø	Int.	T
25	270	370
	360	480



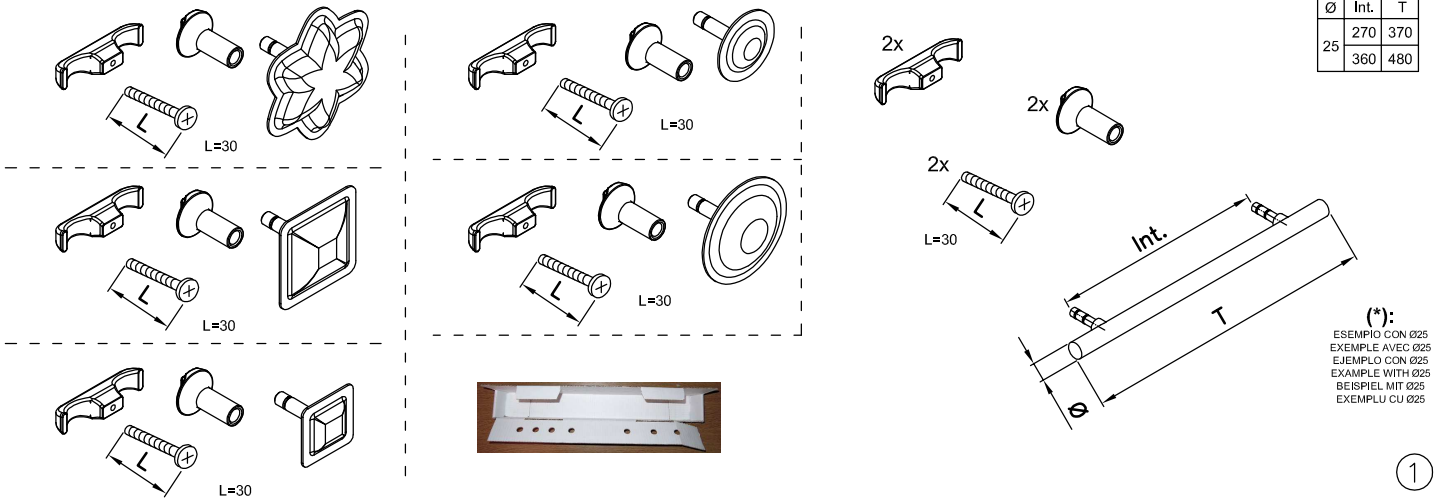 


(\*):  
 ESEMPIO CON Ø25  
 EJEMPLO AVEC Ø25  
 EXAMPLE WITH Ø25  
 BEISPIEL MIT Ø25  
 EXEMPLU CU Ø25

  
 
 
1

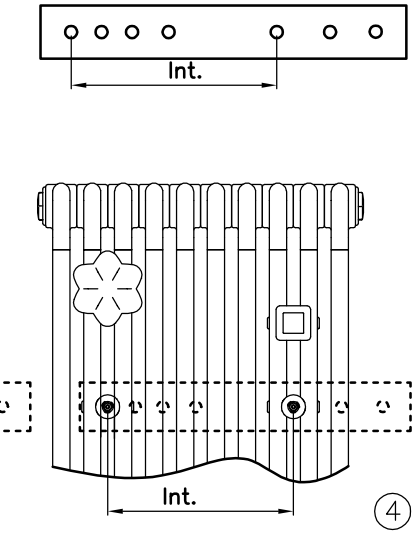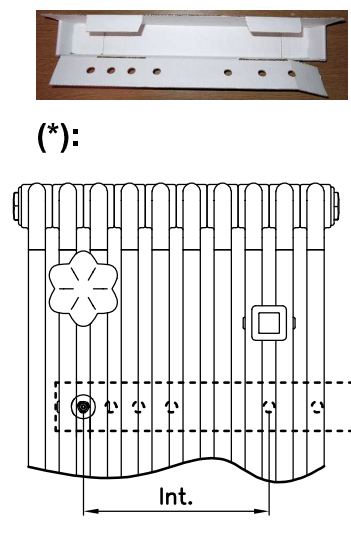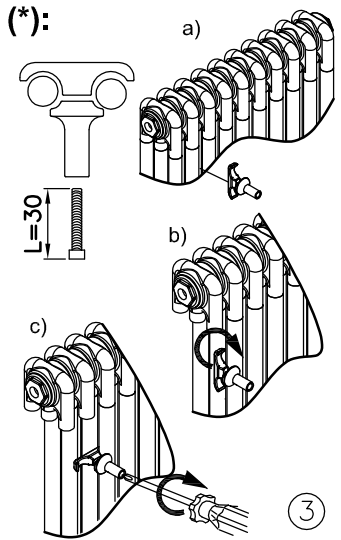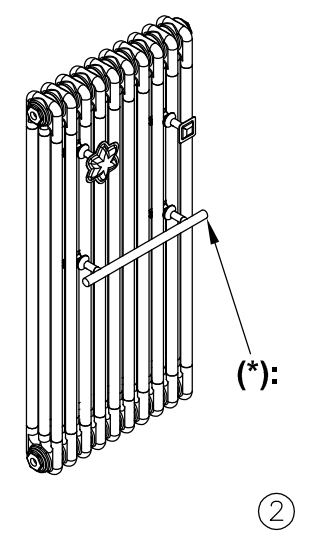

4

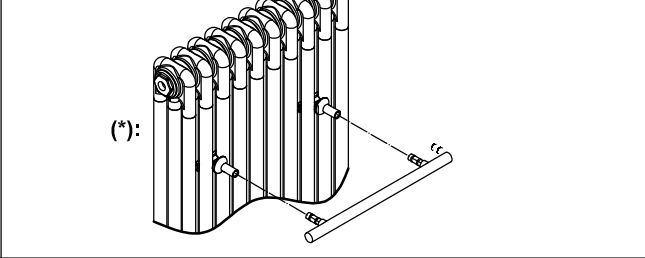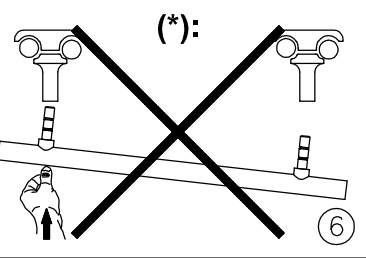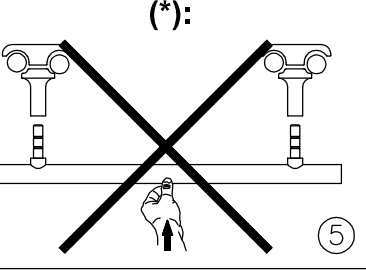   

7

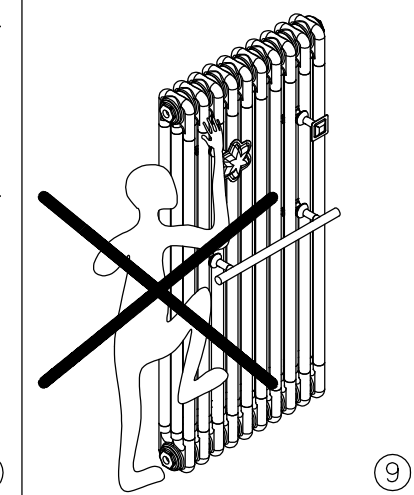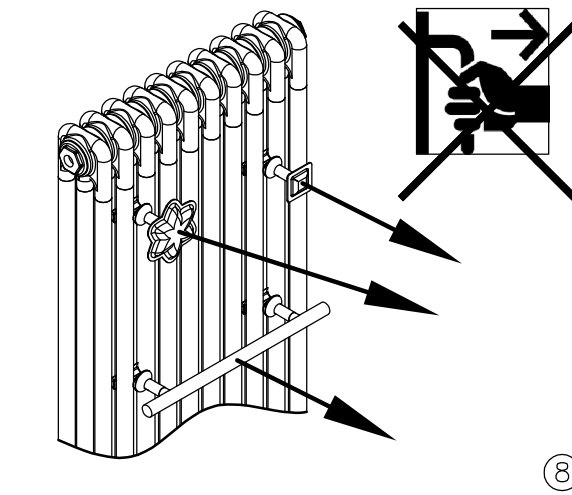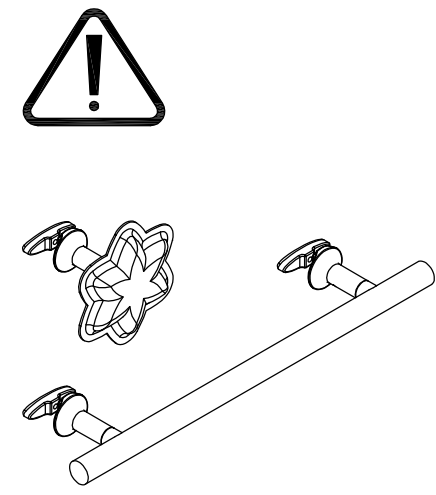   

9